

HOW TO USE THE FIREPLACE

in Villa Fino

1 **Open chimney hatch**

Chimney hatch is at the bottom of the chimney, on top of the fireplace on the left side. Pull it 30 cm outwards. Use a chair if needed.

2 **Open ash hatch**

Ash hatch is a little hatch right under the fireplace window. Open about 5 cm by pulling outwards to enable airflow.

3 **Now you can light**

Tips on how to burn the fireplace environmentally conscious can be found from the Info folder.

4 **When fire has started**

Once the fire is burning nicely, close the ash hatch (2) and adjust air from the lid (left-right), or keep the hatch on a small gap.



Burn maximally the amount of one basket of logs at one time and let the fireplace cool down.

A heat storing fireplace can't handle constant fire but will overheat which will break the fire place.

5 **Afterwards**

When there are no glowing embers in the fireplace or ash hatch, then is the right time to close the chimney hatch (1) and the ash hatch (2).

Close the chimney hatch at the right time - CO2 poisoning danger.



Pro tip Bring tomorrow's logs in today, they'll burn better.

