

HOW TO USE THE FIREPLACE

DOWNSTAIRS

in Villa Juhani

1

Open chimney hatch

Chimney hatch is located at the left side of the fireplace. Pull it 30 cm outwards. Use a chair if needed.

2

Open ash switch

Open the fireplace glass door. The ash switch is the little handle right under the fireplace hearth. By switching it left and right you'll be able to adjust the airflow.

Check also that the ash tray is empty, it is right under the ash switch. Empty cold ashes when needed. When the ash tray is empty, the fireplace burns better.

3

Now you can light

Tips how to burn the fireplace environmentally conscious can be found from the Info folder.

4

Afterwards

When there are no glowing embers in the fireplace or ash tray, then is the right time to close the chimney hatch (1).

This will keep the heat inside the house.

Close the chimney hatch at the right time - CO2 poisoning danger.



Pro tip Bring tomorrow's logs in today, they'll burn better.

