

# HOW TO USE THE FIREPLACE

## *in Villa Maria*

### 1 **Open chimney hatch**

Chimney hatch is at the bottom of the chimney, on top of the fireplace. Pull it 30 cm outwards. Use a chair if needed.

### 2 **Open ash hatch**

Ash hatch is a little hatch right under the fireplace window. Open about 5 cm by pulling outwards to enable airflow.

### 3 **Now you can light**

Tips how to burn the fireplace environmentally conscious can be found from the Info folder.

### 4 **When fire has started**

Once the fire is burning nicely, you can close the ash hatch a little. A small gap is ok.



Burn maximally the amount of one basket of logs at one time and let the fireplace cool down.

A heat storing fireplace can't handle constant fire but will overheat which will break the fire place.

### 5 **Afterwards**

When there are no glowing embers in the fireplace or ash hatch, then is the right time to close the chimney hatch (1) and the ash hatch (2).

**Close the chimney hatch at the right time - CO2 poisoning danger.**



**Pro tip** Bring tomorrow's logs in today, they'll burn better.

